


## FITTING THE KEY-TECHNOLOGY INTO A WATERLESS URINAL

**When fitting the Key-Technology into a waterless urinal, enclosed particularities need to be taken into consideration.**

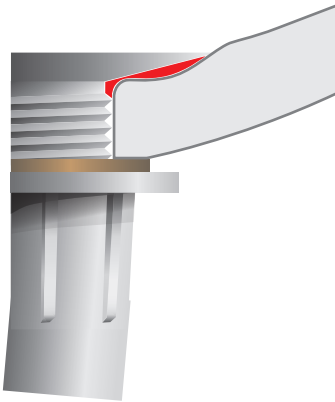

### HOLE DIAMETER

#### **Diameter 50mm +/-1.5 mm**

The ideal hole diameter for the Key-Adapter is 50 mm.

### DRAIN PROFILE

#### **Continuous (stepless) drain profile**

A bent/rounded drain surface prevents from residue formation of liquids between the ceramic drain and the Key-Adapter (see drawing).



### FITTING

#### **Key-Adapter Installation**

From the top: When fitting the Key-Adapter into the drain of the bowl, a customized soft seal is used.

From the bottom: Between the bottom edge of the drain and the Counternut for the Key-Adapter the use of a rubber washer is required. The Counternut for the Key-Adapter has been designed to be tightened sufficiently manually without the use of any additional tools.