



# KEY-SYSTEM® - MAINTENANCE



Insert the Service-Key into the Key-Valve E. Turn counter-clockwise to unscrew the Key-Valve from the adapter.

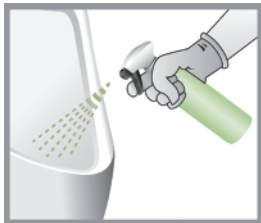

For cleaning routine, spray urinal bowl with pH neutral cleaning agent, 3 times daily.\*

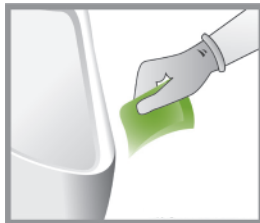

Use a cloth to remove dirt and other particles. Reinstall the Key-Valve, dry urinal with a cloth.

\* Use a mild, surfactant based, pH neutral cleanser (0-15% anionic and/or non ionic surfactants). Uncritical additives are: enzymes, perfume, dyes, inhibitors etc.

**CAUTION: Never use aggressive cleaning products containing i.e. chlorine, bleaches, acids, alkalines or organic solvent based cleaning agents.**

# KEY-SYSTEM® - DO'S & DON'TS

## DO

- **DO** only use pH neutral cleaning agents for the daily cleaning routine (we recommend min. 3 times daily)
- **DO** change the Key-Valve as soon as the Key-Ring is empty
- **DO** clean urinal, adapter and drain thoroughly and remove dirt and particles. Then install the new Key-Valve

## DON'T

- **DON'T** use chemicals or strainers in the urinal
- **DON'T** use cleaning agents containing bleaches or chlorines
- **DON'T** use cleaning agents containing acids or alkalines

during the daily cleaning process with **installed Key-Valve.**