





URINAL BOWCLEANING INSTRUCTIONS

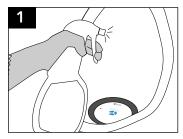

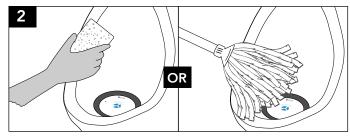

Spray (mist) cleaner on the entire bowl. Clean outside and inside of bowl with rag, sponge, or mop.

WHEN SHOULD A CARTRIDGE BE CHANGED?











Blue sealant appears on top of the cartridge

Fluid flows very slowly into the cartridge

Fluid does not drain into the cartridge

VELOCITY CARTRID CHANGING INSTRUCTIONS



Insert key into cartridge.



Turn key to left to unlock.



Lift and tilt cartridge to drain all free liquids then spray Falcon Foam Housing Cleaner into housing.




Place cartridge into bag, tie bag to seal and dispose.



CAUTIONAfter removing cartridge from housing, certain naturally occurring butpotentially hazardous sewer gasesmay escape through the opening until re-installed properly. If replacement cartridge will not be re-installed immediately, place a rag or paper towels into opening to block any sewer gases. Remove the paper towels or rap prior to inserting new cartridge. Alternatively.

paper towels into opening to block any sewer gases. Remove true paper towels or rag prior to inserting new cartridge. Alternatively, use Falcon Foam Housing Cleaner to both clean housing and reduce any outflow of sewer gases through open housing during cartridge changeNever smoke, have an open flame, or place your nose or mouth near waterless urinal housings into which a cartridge is not yet properly installedou also can wear a breathing mask when removing or installing any waterless urinal or cartridge to reduce potential exposure to any such passes. cartridge to reduce potential exposure to any such gases.








Scrub the housing and deep inside of the tailpipe with Flush housing with 5 gallons A long 1.5-inch diameter nylon brush. (20 liters) of hot soapy water.

Wipe clean inner stainless steel rim.




key to right to lock and click into place.



Insert new cartridge into housing and turn Slowly fill cartridge with 1 quart (1 liter) or more of clean water until there are no air bubbles.



Add blue sealant (allow time to drain into cartridge).



Spray (mist) bowl with cleaner and wipe clean.